
Separate Double Check Block



Drop prevention and temporary intermediate stops of cylinders are possible.

Example of Operating Circuit

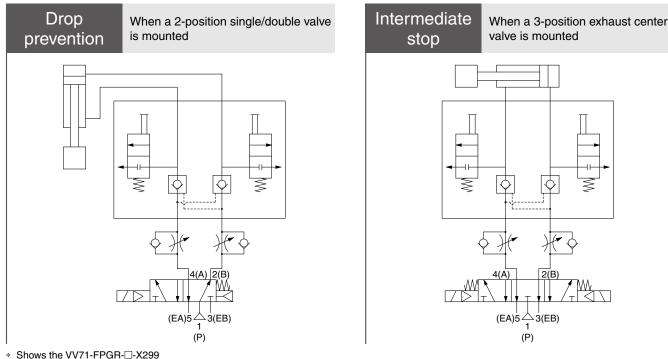

* When single and double solenoid valves are used in combination, the SUP residual pressure release is intended to prevent cylinder dropping.

≜Caution

Please use the product in accordance with the specifications provided in the catalogs/operation manuals. It is your responsibility to check the suitability for your workpiece and equipment.

Variations

		Applicable bore size [mm]					
		ø40 or less	ø63 or less	ø100 or less	ø140 or less		
	Model	VQ1000-FPG-□□-□	VQ2000-FPG-00-00	VV71-FPGR-□-X299	VV72-FPG-06□-X2		
Ар	pearance						
Туре	Single unit	•	•	•	•		
iype	Manifold	•	•	● (X296)	—		
Residual pr	essure release valve	•	•		_		

•: Yes -: None

VQ1000-FPG-□□-□/VQ2000-FPG-□□-□ VV71-FPGR-□-X299/X296 VV72-FPG-06□-X2



How to Order

Double check block with residual pressure release valve VQ 1 000-FPG-C4 M5-F Single unit Body size VQ1000 2 VQ2000 IN side port size (Refer to the table below.) OUT side port size (Refer to the table below.) IN side/OUT side port size VQ1000 VQ2000 Symbol Port size M5 M5 thread 0 01 Rc1/8 •

Rc1/4

ø3.2 One-touch fitting

ø4 One-touch fitting

ø6 One-touch fitting

ø8 One-touch fitting

ø5/32" One-touch fitting

ø1/4" One-touch fitting

ø5/16" One-touch fitting

Option

Nil	None
D	DIN rail mounting (For manifold)
F	With bracket
Ν	Name plate

When 2 or more symbols are specified, indicate them alphabetically.


<Bracket Assembly>

Part no.	Tightening torque	
VQ1000-FPG-FB	0.22 to 0.25 N⋅m	
VQ2000-FPG-FB	0.8 to 1.0 N·m	

Manifold

VVQ 1 000-FPG-06

(DIN rail mounting)

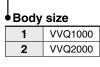

<Ordering example>

VVQ1000-FPG-06 ··· 6-station manifold

* VQ1000-FPG-C4M5-D, 3 sets Double check block single unit

02

C3

C4

C6

C8

N3

N7

N9

* VQ1000-FPG-C6M5-D, 3 sets .

- * Select the DIN rail mounting option (symbol "D") for the double check block single unit when ordering.
- * Select the same body size for the double check block and manifold. Different sizes cannot be mixed.

Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from being able to stop for long periods of time. Check for leakage using a neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston seal, and rod seal for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with an M5 thread) is recommended when the cylinder is required to perform long intermediate stops.
- Combining a double check block with a 3-position closed center or pressure center solenoid valve is not possible.
- The M5 fitting assembly comes with the product but is not built into the double check block. After screwing in the M5 fittings, mount the assembly to the double check block.
- · When fittings, etc., are being screwed into the double check block, tighten them with the torque below.

-	-
Connection threads	Proper tightening torque [N·m]
M5	0.8 to 1.2
Rc1/8	7 to 9
Rc1/4	12 to 14

- · If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not be able to perform intermediate stops.
- \cdot Set the cylinder load so that the cylinder pressure will be within 2 times that of the supply pressure.

•

•

•

•

•

•

•

•

•

•

For VQ1000 For VQ2000

01	1 station	01	1 station
:	÷	:	÷
16	16 stations	16	16 stations


*VQ1000-FPG-*__/*VQ2000-FPG-*___ VV71-FPGR--X299/X296 VV72-FPG-06 -X2

How to Order

Double check block with residual pressure release valve						
Single unit	VV71-	FPG	RX	299		
1			●Thread Nil F	type Rc G		
Manifold	VV71-	FPG	R-3-]-X 2	296	
Manifold	VV71-		R-3-		2 96 d type	
Manifold	_					
	Stations	<hexagon s<="" td=""><td>ocket head cap screw></td><td>Threa</td><td>d type</td></hexagon>	ocket head cap screw>	Threa	d type	
Manifold	Stations Symbol Stations	<hexagon se<br="">Stations</hexagon>	ocket head cap screw> Part no.	• Threa	d type Rc	

* The product number of the single unit does not need to be indicated when ordering the manifold.

Double check block

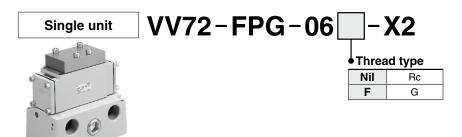

≜Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from being able to stop for long periods of time. Check for leakage using a neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston seal, and rod seal for air leakage.
- · Combining a double check block with a 3-position closed center or pressure center solenoid valve is not possible.
- · If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not be able to perform intermediate stops.

· Set the cylinder load so that the cylinder pressure will be within 2 times that of the supply pressure.

Specifications

Model	VQ1000-FPG-□□-□	VQ2000-FPG-□□-□	VV71-FRGR-□-X299	VV72-FPG-06□-X2			
Fluid	Air						
Proof pressure	1.5 MPa						
Operating pressure range	0.15 to (0.8 MPa	0.1 to 1.0 MPa				
Ambient and fluid temperatures	–5 to	50°C	5 to	60°C			
Sonic conductance [dm ³ /(s·bar)]	0.6	3.0	3.1	7.2			
[Effective area mm ²]	[3]	[15]	[15.5]	[36]			
Port size	M5	Rc1/8, 1/4	Rc3/8	Rc3/4			
Port size	ø3.2, ø4, ø6, ø5/32, ø1/4	ø6, ø8, ø1/4, ø5/16	G3/8	G3/4			
Applicable cylinder size (Reference)	Up to ø40	Up to ø63	Up to ø100	Up to ø140			
Pressure difference between the							
inlet side and outlet side	0.1 MPa	0.07 MPa	0.03 MPa	0.02 MPa			
(At a supply pressure of 0.5 MPa)*1							


*1 Due to its construction, a pressure difference is generated between the inlet side and outlet side.


* The same applies to the manifold type.



*VQ1000-FPG-*__*/VQ2000-FPG-*___ VV71-FPGR--X299/X296 VV72-FPG-06 -X2


Dimensions

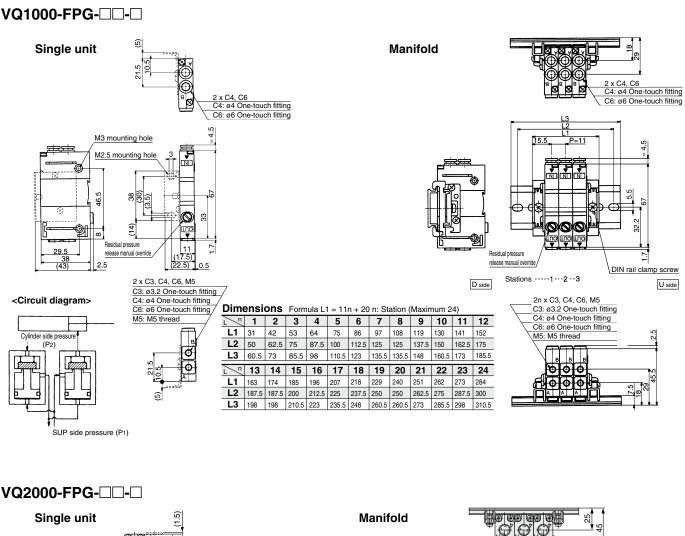

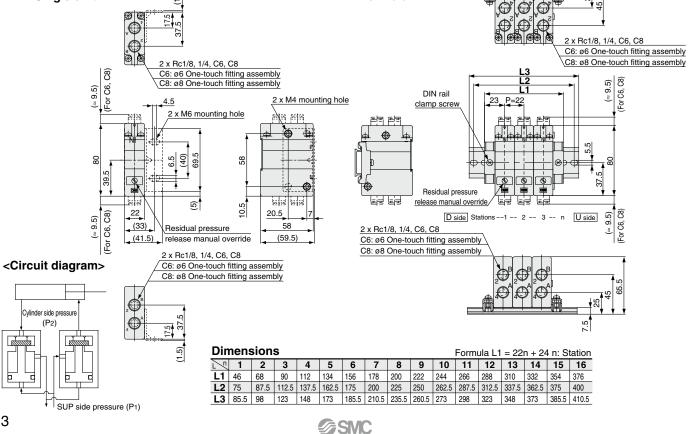


Dimensions

VV71-FPGR-X299

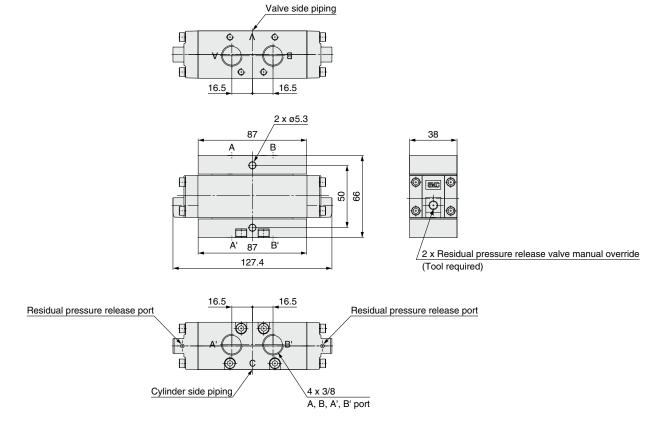


Symbol

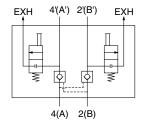

*VQ1000-FPG-*__/*VQ2000-FPG-*__-VV71-FPGR--X299/X296 VV72-FPG-06 -X2

Dimensions

VV71-FPGR--X296

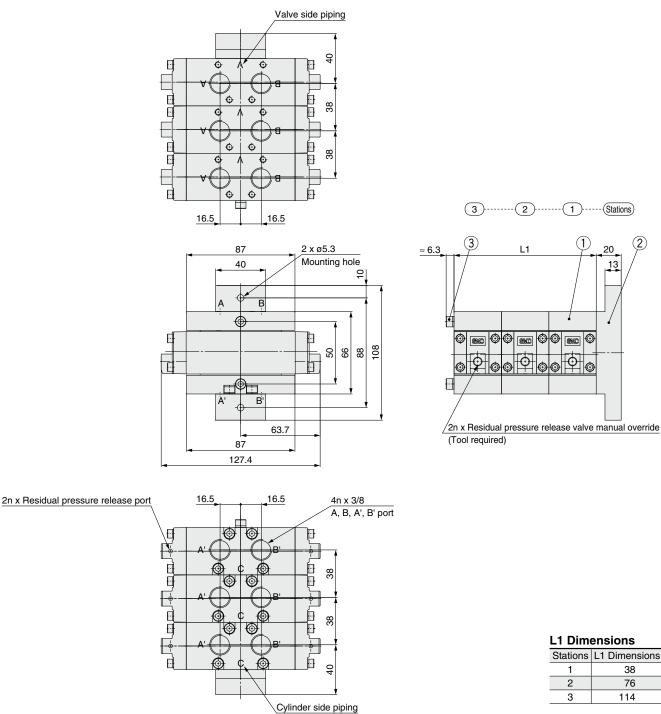

2

(1)

20

Stations L1 Dimensions

1 2

3


38

76

114


13

Symbol

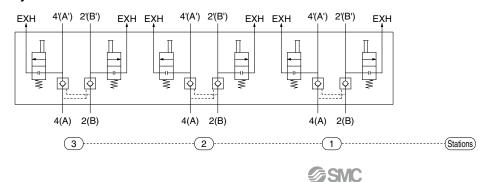

Dimensions

VV72-FPG-06 -X2

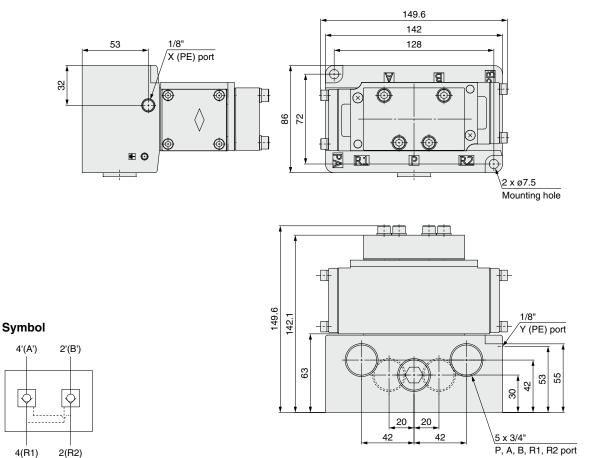

4(R1) 2(R2)

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation

Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362 https://www.smcworld.com © 2023 SMC Corporation All Rights Reserved